





## Removing the Outer Case

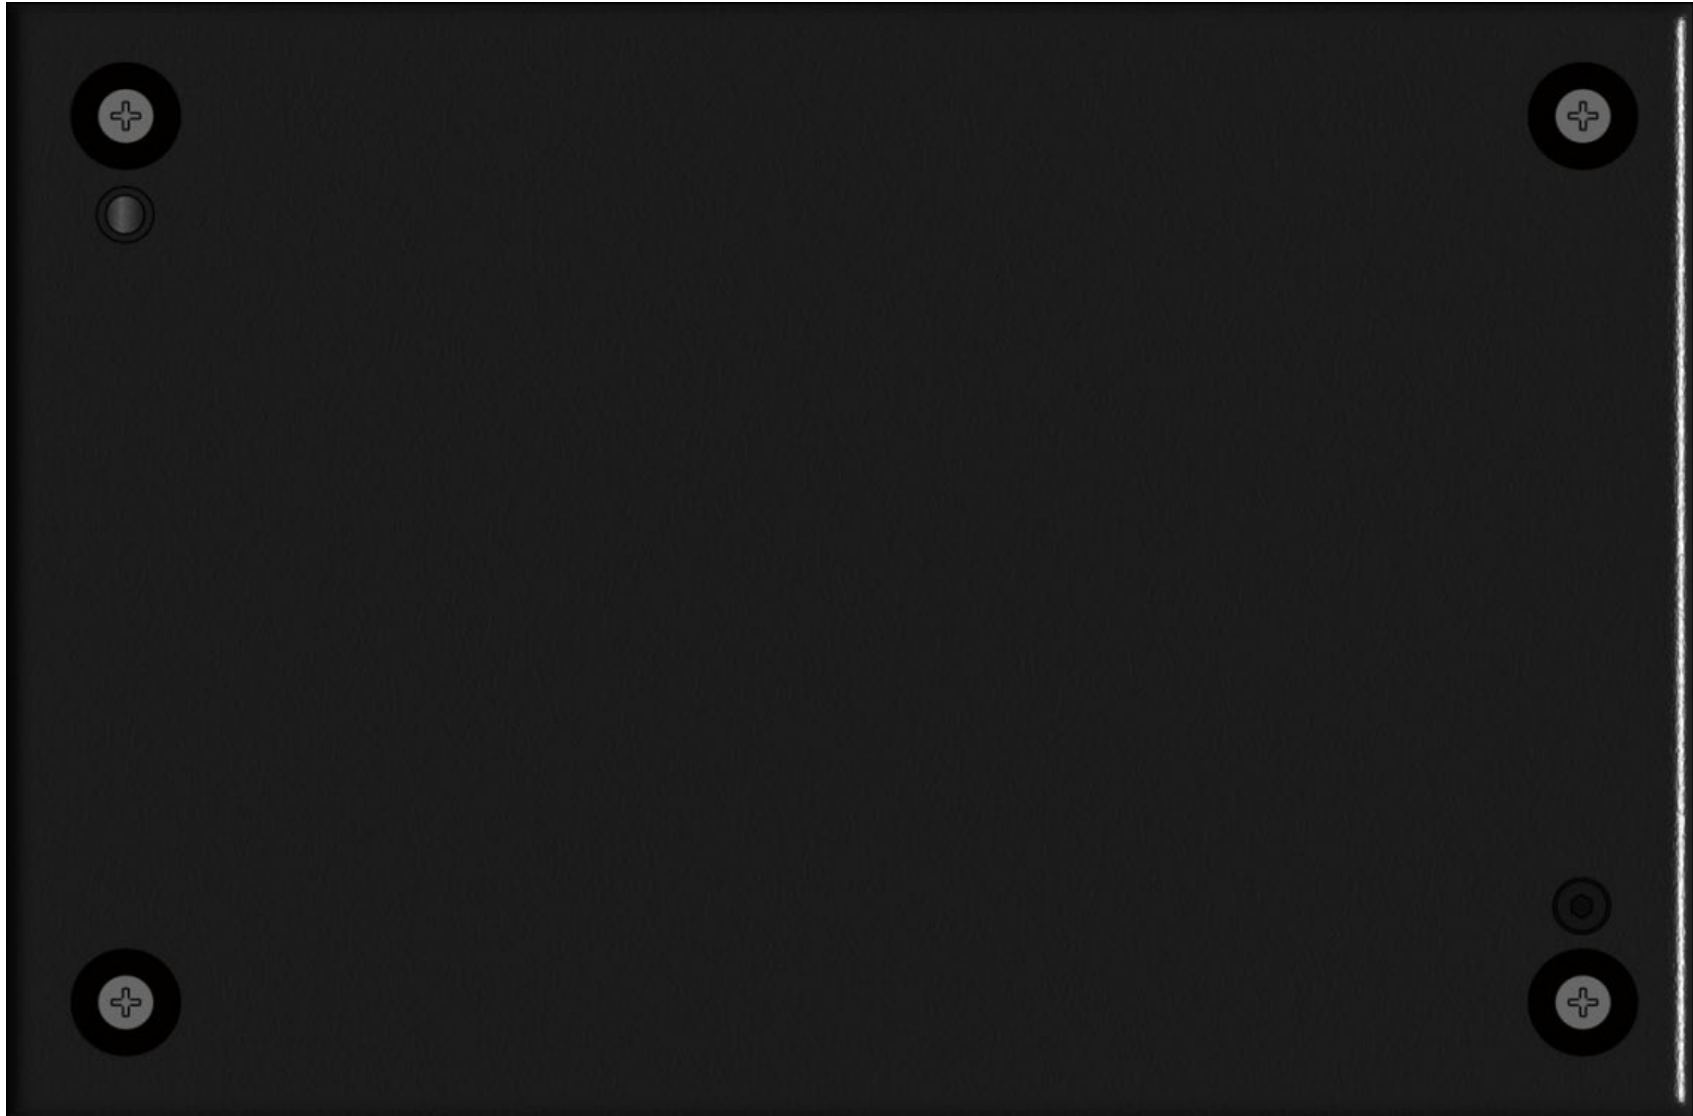


- Firstly remove the four corner screws that hold the feet to the case. Use a posidrive screwdriver for this.
- Next, if there is one, remove the M6 pan head allen bolt from the underside, towards the rear of the case.
- Set all fixings aside in a safe place.

## Replacing the 321 modules in a NAC 72

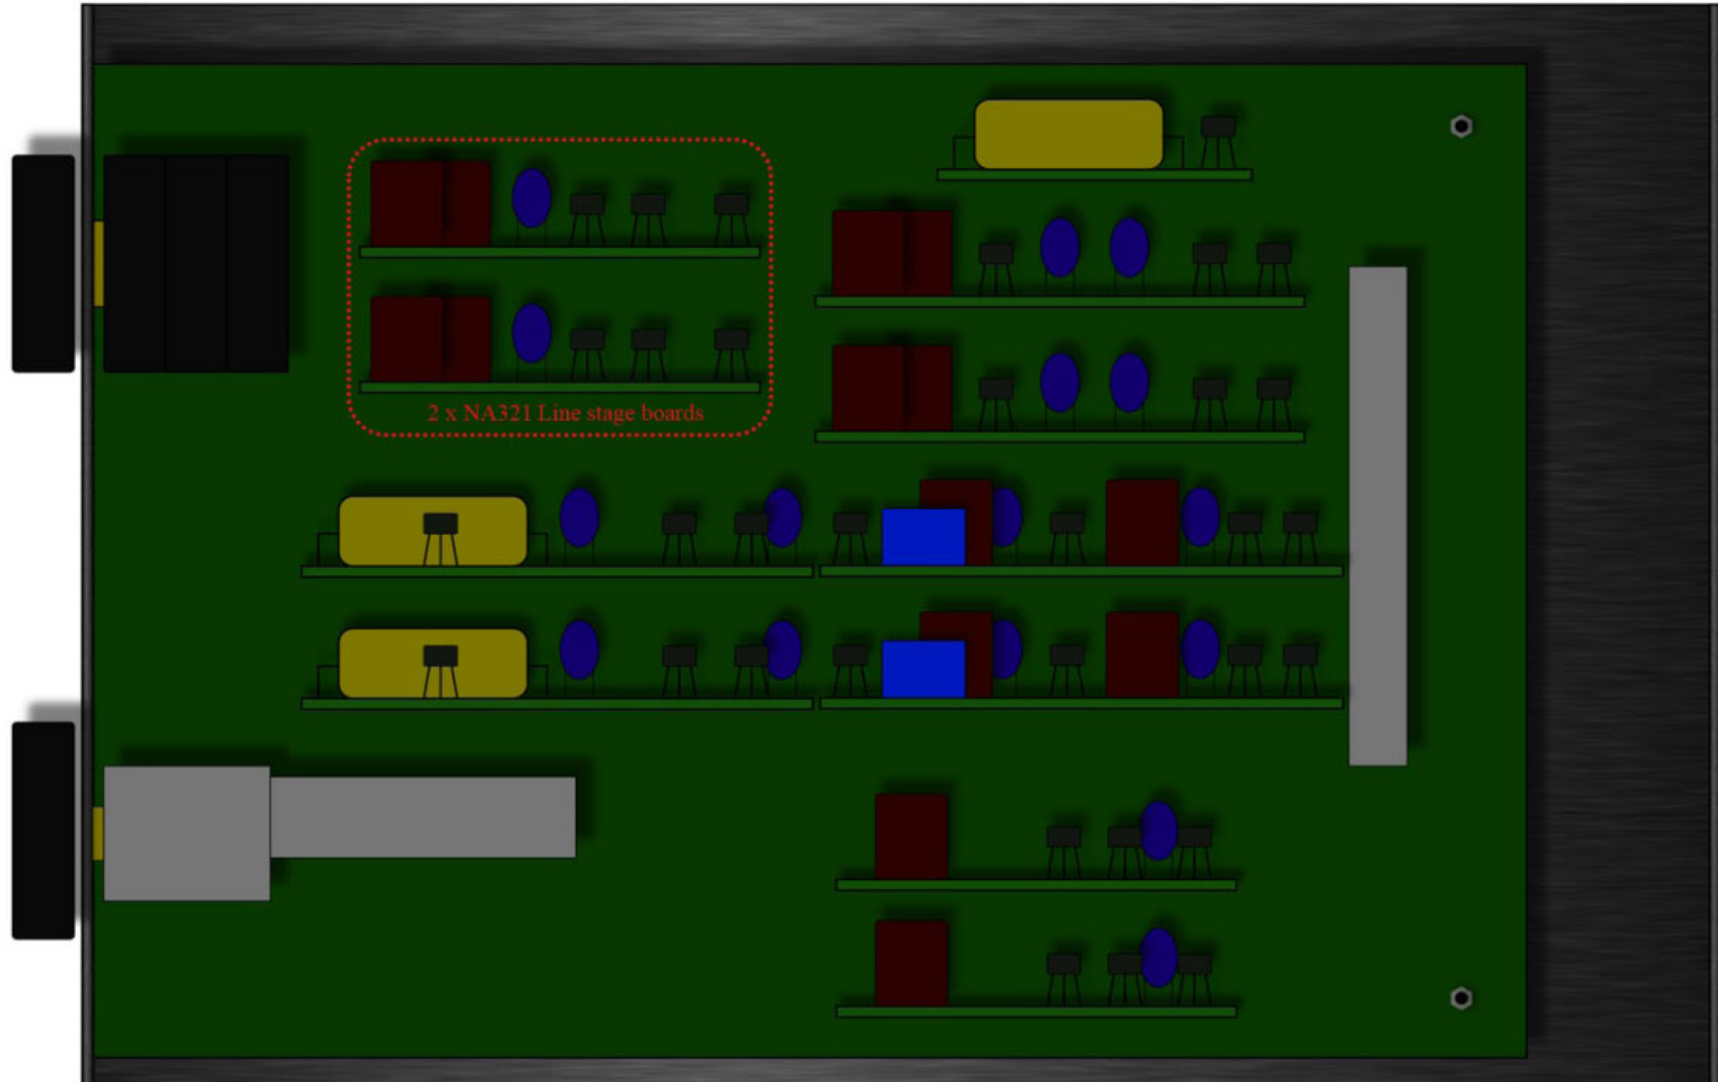


- Identify the '321' boards directly behind the large black volume control. Simply lift these boards upwards to release them from the main motherboard. Set the pair aside and keep them safe.
- Take the pair of Avondale Audio upgrade modules and place them down upon the same pins that the old 321 boards just came from, taking great care to make sure all pins are lined up to the receptacles.

## Replacing the 321 modules in a NAC 32/32.5

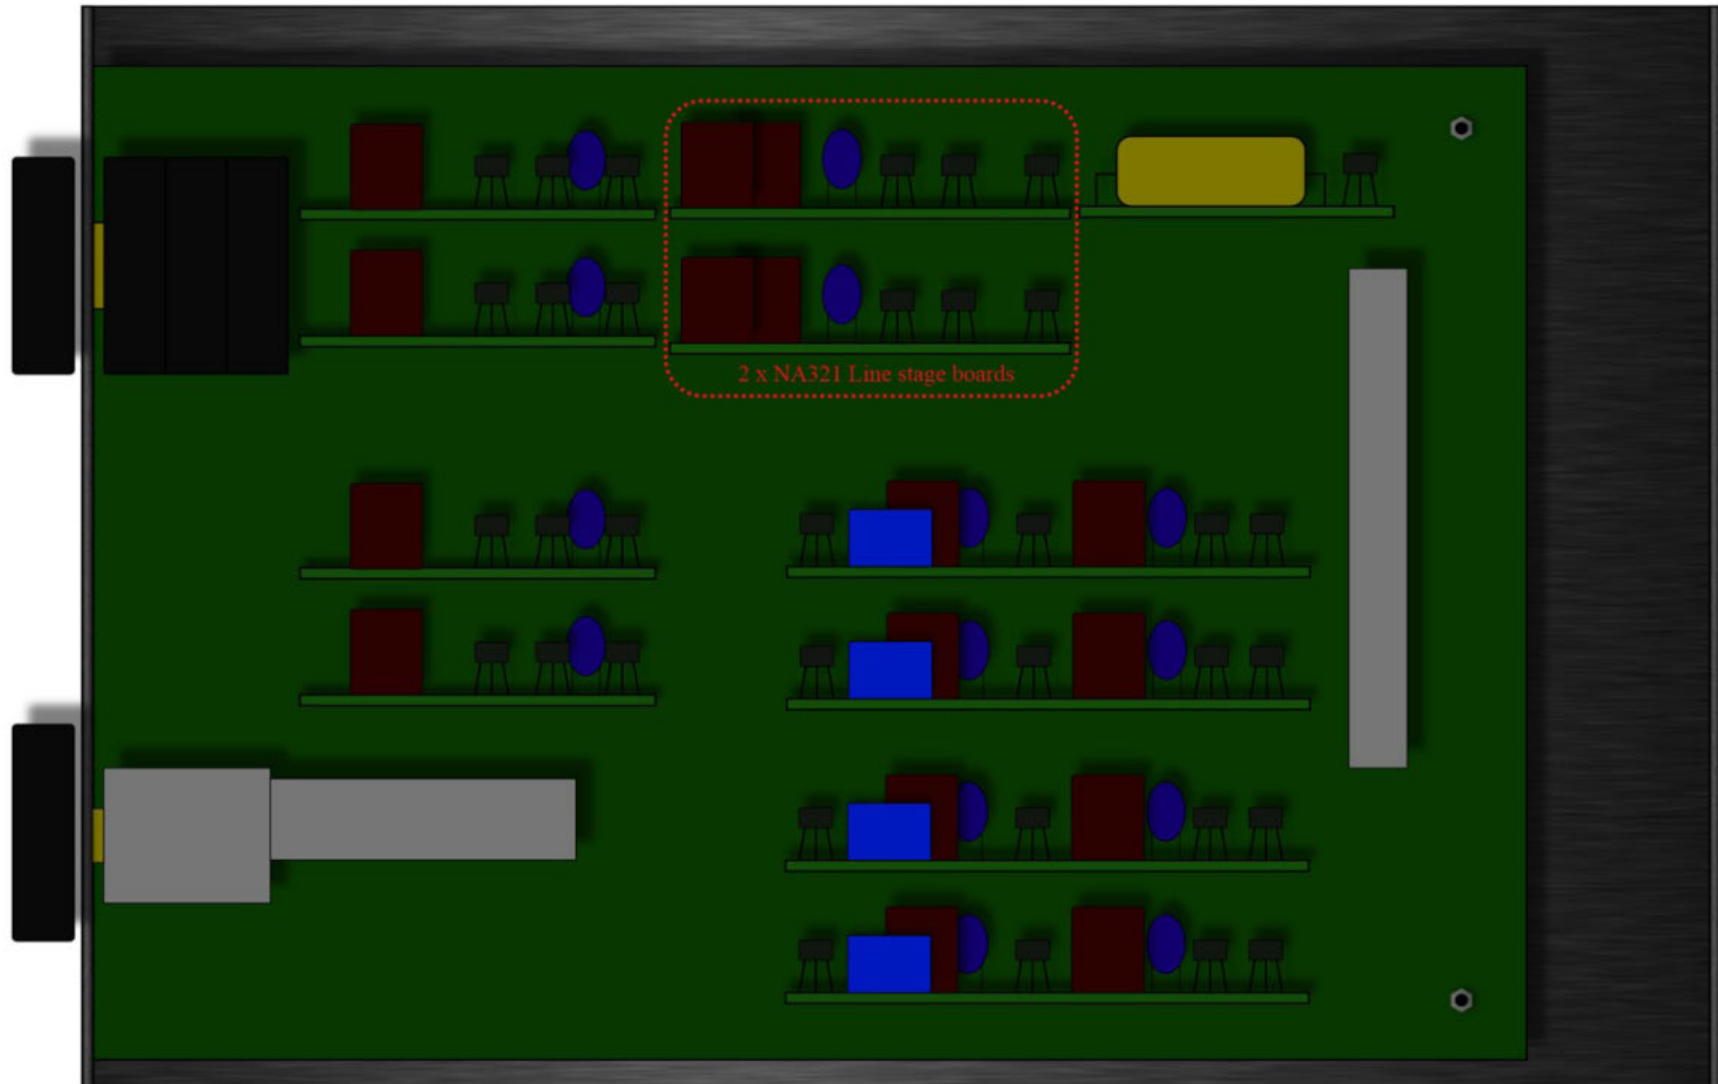

- Identify the '321' boards directly behind the large black volume control. Simply lift these boards upwards to release them from the main motherboard. Set the pair aside and keep them safe.
- Take the pair of Avondale Audio upgrade modules and place them down upon the same pins that the old 321 boards just came from, taking great care to make sure all pins are lined up to the receptacles.

## Replacing the Outer Case

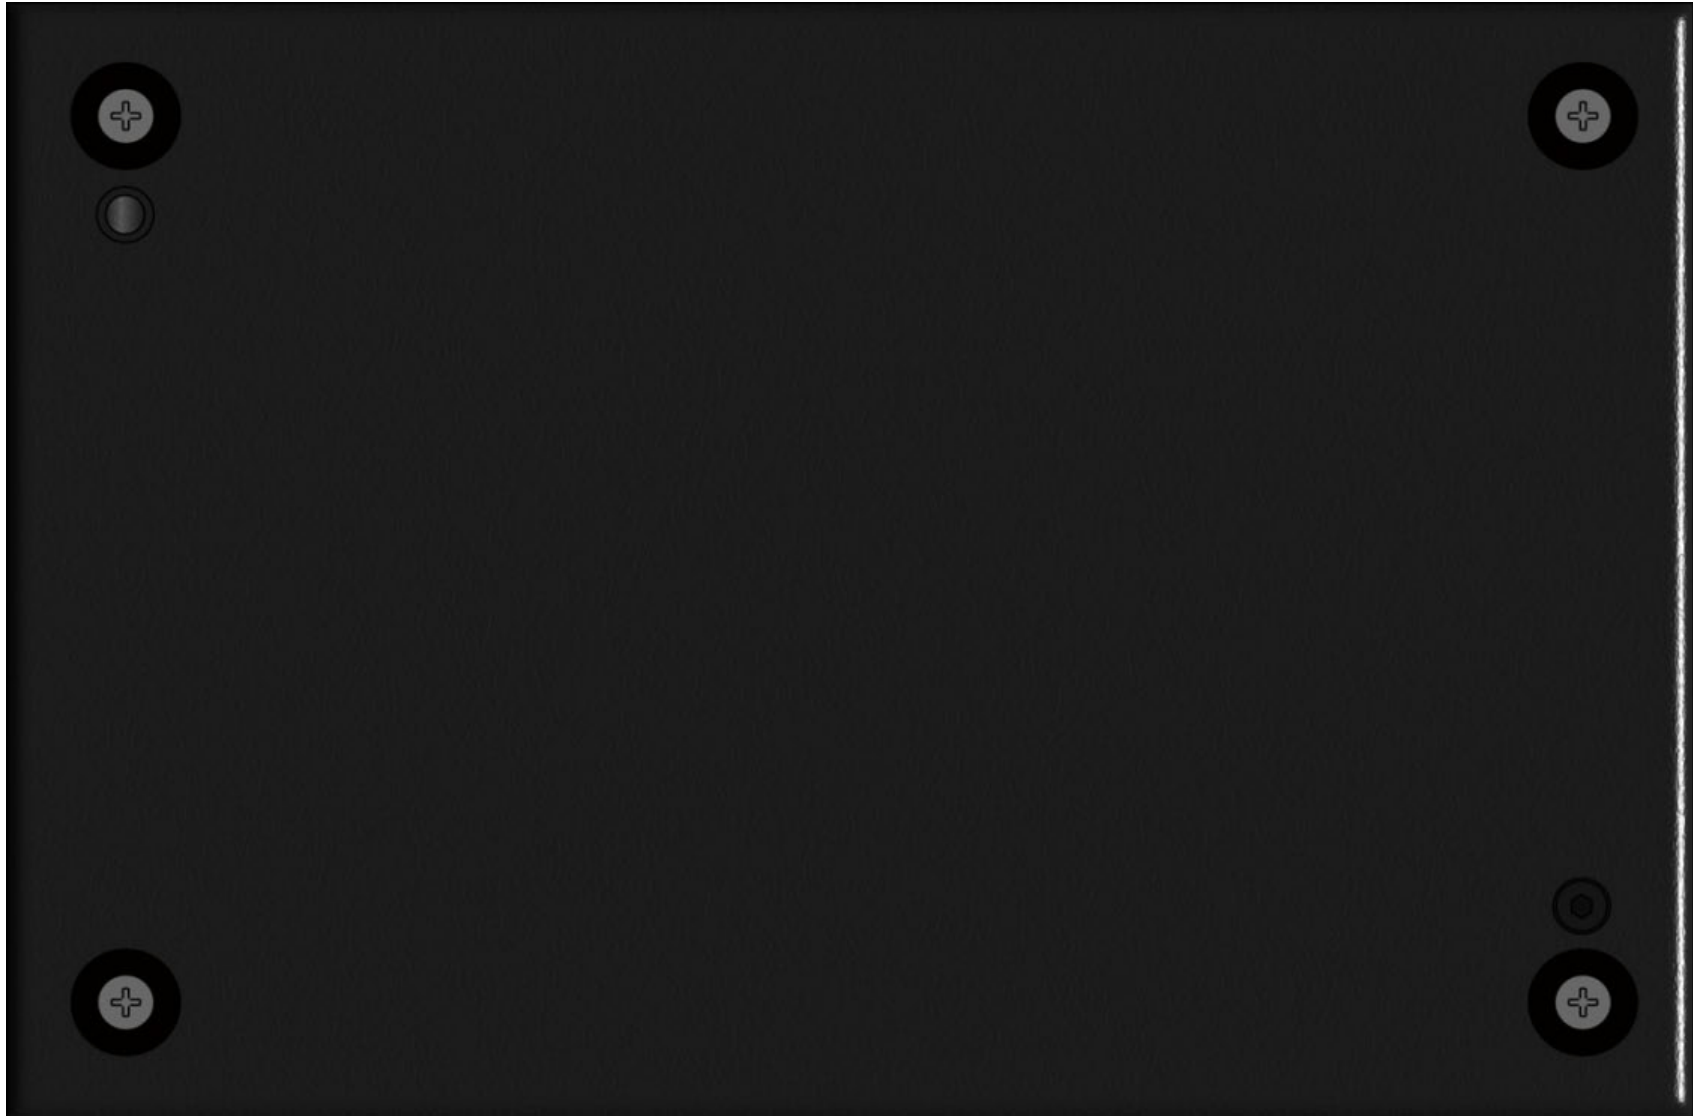

- Firstly take all fixings from the case that you previously set aside.
- Next, replace, if there was one, the M6 pan head allen bolt from the underside, towards the rear of the case.
- Finally replace all four corner screws that hold the feet to the case. Use a posidrive screwdriver for this.

Avondale Audio  
2 Avondale Road  
The Hollies  
Newbold  
Chesterfield  
Derbyshire  
S40 4TF

avondale@avondaleaudio.com

+44 1246 200096



For more information please visit [www.avondaleaudio.com](http://www.avondaleaudio.com)